


P5985 card usage

1. Jumper in JP1:

This is jumper to set card number. Default condition is shorted in jumper for 1'st card mode. When jumper is opened, it is 2'nd card mode.

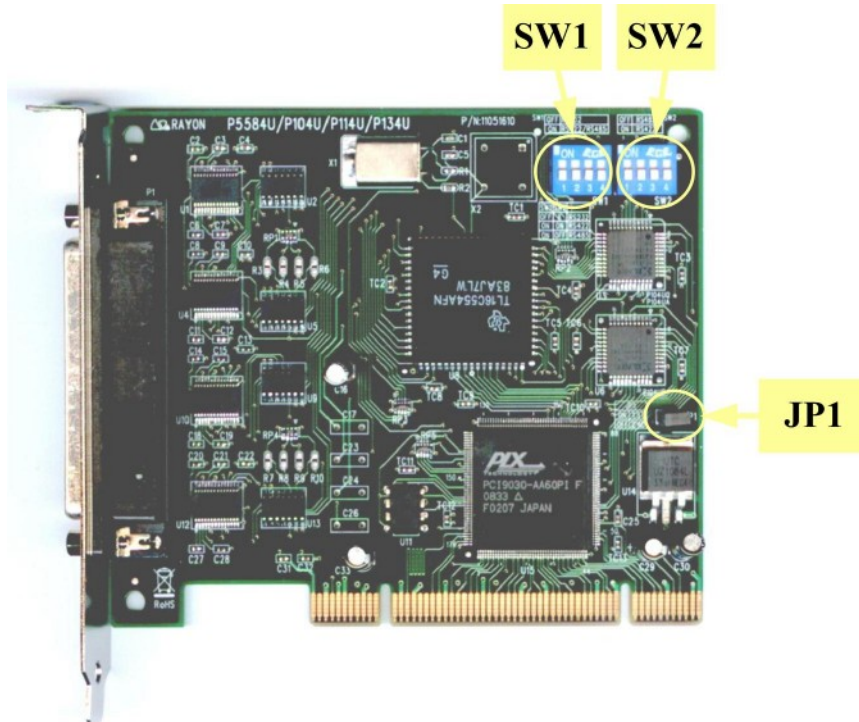

2. DIP SWITCH in SW2:

It is 4 bit DIP switch for SW2. Each bit will set the corresponding port interface type. SW2 is used to set for RS422 (ON) or RS485 (OFF location). Bit 1 is used for port A. Bit 2 is used for port B. Bit 3 is used for port C. Bit 4 is used for port D.

3. usage in RS485 interface mode :

We need to short TXD+ and RXD+ signal as DATA+ signal. We need to short TXD- and RXD- signal as DATA- signal. User can use our **TB485** converter for DB9 connector to 3 terminal block for DATA+, DATA-, GND connection.